How to add user via:

FREE call SMS message FREE mobile APP FREE SERA2 software

https://www.topkodas.lt

FREE short call

- Call PROGATE SIM card's number from your cell phone
- PROGATE will decline the call
- It is FREE
- The first person called to the module, become system's administrator
- The phone number will be saved to the memory of the module
- You will receive SMS message from the module





C

2>

0>

SMS message

Send SMS command: INSTODODOD 004 ID#TEL#OUT#OPT#NAME#

You will see the phone number in SERA2 Just read user's list in PROGATE



- INST00000 004 ID#TEL#OUT#OPT#NAME#
- 000000 default installer password
- To enter user's telephone number for remote control via short call USER NAME-only Latin characters is allowed inside SMS
- 004= command code (enter user's telephone number for remote control via short call) ID = user ID number 001-800
- TEL = user's telephone number (max 16 digits) without (+) comprised of country code, operator's code and user's telephone number.
- the end symbol #;
- OUT= output number, that will be controlled.
- OPT = DIAL function: 0 disabled 1 enabled, Sequence from the left to the right
- OPT: 1-ARM/DIARM



Add user via FREE app

You will see the phone number in SERA2 Just read user's list in PROGATE

If You will use mobile app Mobile data must be enable in SIM card

 C 88 Play.google.com/store/apps/details G 400 × 400 B. Booking.com 3 Amazon.com Page Bay F Facebook 6 Getting Started 									
Google Play	Search								
88 Apps	Categories 🗸 Home Top charts New releases								
My apps									
Games Family	SERA Cloud IOT TOPKODAS Tools PEGI 3								
Editors' Choice Account	▲ You don't have any devices. Add to Wishlist Install								





FREE SERA2 software

- It is possible to add user via FREE SERA2 software
- You will find it in https://www.topkodas.lt/downloads/
- Go to SERA2> Users/ Access control> Users window
- Press "Read" in the command line
- Edit configuration
- Press "Write" in the command line

③ SERA2 [PROGATE]	SERA2 [PROGATE]														
📄 File 🔌 Settings 🔓 Devices 🐻 Read [F5] 🛛 🖓 Write [F6] 👘 Update 🧐 Help															
r System Options	Remote Control Users table														
GSM Communications	Users	: A	.ccess	Shedules Holidays											
····· Inputs/Burglar Alarm Zones		Temporary access Date/Time window													
Outputs (PGM) Automation/Sensors Event Summary Events Log RT Testing&Monitoring Firmware) E	in	User Name	User Tel.	iButton Code	RFID Keycard	Keyb Code	OUT	ARM/DISARM	En	Start Date	Expiration Date		
	00	1 🖡	🗹 Ma	ister	+37065558449	000000000000	000000000	*****	OUT1			2020-11-30 🛗 11:37	2020-11-30 🛗 11:37		
	00	2 [Ziv	vile	+37065352336	000000000000	000000000		OUT1		Γ	2020-11-30 🛗 11:37	2020-11-30 🛗 11:37		
	00	з [Ziv	vile 2	+37061637535	000000000000	000000000		OUT1	>	\Box	2020-11-30 🛗 11:35	2020-11-30 🛗 11:35		
) 00	4 [Us	er Name 4	+	000000000000	000000000		NONE		\Box	: 020-11-30 🛗 11:37	2020-11-30 🛗 11:37		
	00	5 I.	Us	er Name 5	+	0000000000000	0000000000		NONE			2020-11-30 🛗 11:37	2020-11-30 🛗 11:37		
	00	6 [Us	er Name 6	+	000000000000	0000000000		NONE			2020-11-30 🛗 11:37	2020-11-30 🛗 11:37		

• To start configuration plug – in USB cable or connect remotely



More information via email:

info@topkodas.lt

https://www.topkodas.lt