Control using SMS & free short call



NOTE:

• The controller comes factory pre-configured to work. A first call from any phone to controller's SIM card number will turn on the RELAY output for 2 seconds.



- The phone number will be stored in the module's memory automatically. It will allow to control RELAY output with free short call.
- Calls from different phone number will be rejected.
- The controller can be installed without any additional configuration if such operation mode is acceptable.
- The controller configuration can be changed with free configuration software SERA2

- Install and open SERA2 software. [<u>https://www.topkodas.lt/downloads/</u>]
- Connect PROGATE to the computer via mini USB cable
- Connect power supply
- Insert SIM card.
- Screw GSM antenna
- Press "Read"
- Go to SERA2>Users/ Access control
- Enter phone number, select OUT1
- Press "Write"

③ SERA2 [PROGATE]												-
📄 File 🛛 🍓 Settings 🛛 🔒 Dev	ices	🙄 Re	ad [F5] 🛛 🎇 Write [F6]	🛑 Upda	te Help							
System Options	Rem	ote Cor	ntrol Users table									
GSM Communications					🔲 Guest mode on US	ER 9 📃 Auto	Call Answering	2 s				
	Use	rs A	ccess Shedules Holidays									
… Inputs/Burglar Alarm Zones												
Outputs (PGM)			<u> </u>									Temporary a
Automation/Sensors		ID E	n User Name		User Tel.	iButton Code	RFID Keycard	Keyb Code	OUT	ARM/DISARM	En	Start Date
Event Summary		01A 🖪	Z Master	+	370623	0000000000000	0000000000	1234	OUT1			2021-05-09 🛗 21
Events Log BT Tection®Monitoring	0	02A 🛛	User Name 2	+		000000000000000000000000000000000000000	0000000000		NONE			2021-05-09 🛗 21
RT Testing&Monitoring Firmware		03A [User Name 3	+		000000000000	0000000000		NONE			2021-05-09 🛗 21

• Go to Sera2> Outputs (PGM)> Mode > Steady or Pulse

• Press "Write"

SERA2 [PROGATE]												_	-	
File 🔌 Settings 🕋 D	evices	📕 Read [F5] 🛛 📕 Write [F6]	🛑 Update 🛭 🔞 Help	I Contraction of the second										
- System Options	Out	puts												
- GSM Communications	Outputs Scheduler Holidays													
 Users/Access control 		· [,-]												
<u>- Inputs/Burglar Alarm Zones</u>														
Outputs (PGM)		ID Output Location in Hardware	Output Label	Out definition	No	Mode	Timer	Invert	Pulsating	ON Time	OFF Time	Count	Input	1 2
- Automation/Sensors	Þ	1 PROGATE, RELAY	OUT1	Automation & Access Control	N/A	Steady	2s			100ms	100ms	0	N/A	
∝Event Summary ∝Events Loq		2 PROGATE, IO1 (1A)	OUT2	Automation & Access Control	N/A	Steady	10s			100ms	100ms	0	N/A	
- RT Testing&Monitoring		3 PROGATE, IO2 (1A)	OUT3	Automation & Access Control	N/A	Steady	10s			100ms	100ms	0	N/A	
- Firmware		4 PROGATE, 1VV (10mA, Max Voltage	3 OUT4	Automation & Access Control	N/A	Steady	10s			100ms	100ms	0	N/A	


Control via free short call

1. To control the gate with a free short call or SMS, the phone number needs to be stored in the module memory In the SERA2> Users/Access control window, and it is not marked under "Guest mode on USER 9. Then calls from other phone numbers will be ignored

			-							
i SERA2 [PROGATE]										- 0
🗎 File 🔌 Settings 🔒 Dev	rices 🚦	🖁 Rea	d (F5) 🛛 🞇 Write (F6) 👘 Up	idate 🔞 Help						
GSM Communications Users/Access control			rol Users table	Guest mode on US	ER 9 🗌 Auto	Call Answering	2 s			
- Inputs/Burglar Alarm Zones - Outputs (PGM)			٩,							Temporary access D
- Automation/Sensors	ID	En	User Name	User Tel.	iButton Code	RFID Keycard	Keyb Code	OUT	ARM/DISARM E	in Start Date
Event Summary	▶ 001.	A 🔽	Master	+370623	000000000000000	0000000000	1234	OUT1		2021-05-09 🛗 23:59
Events Log RT Testing&Monitoring	002	A 🗖	User Name 2	+	0000000000000	0000000000		NONE		2021-05-09 🛗 23:59
Firmware	003.	A 🗖	User Name 3	+	000000000000	0000000000		NONE		2021-05-09 🛗 23:59
	004.	A 🗖	User Name 4	+	000000000000	0000000000		NONE		2021-05-09 🛗 23:59
	005.	A 🗖	User Name 5	+	000000000000	0000000000		NONE		2021-05-09 🛗 23:59
	006.	A 🗖	User Name 6	+	000000000000	000000000		NONE		2021-05-09 🛗 23:59
	007.	A 🗖	User Name 7	+	000000000000	000000000		NONE		2021-05-09 🛗 23:59
	008.	A 🗖	User Name 8	+	000000000000	0000000000		NONE		2021-05-09 🛗 23:59
SMART			User Name 9	+	000000000000	0000000000		NONE		2021-05-09 🛗 23:59
					0000000000000					

2. If you want the output to be controlled by a free call from any phone number, mark the box next to

"Guest mode o	n USER 9							
③ SERA2 [PROGATE]					\mathcal{I}			
📄 File 🛛 🌯 Settings 🛛 🔒 Dev	rices 🛛 🐺 Read (F5)	🙄 Write (F6)	🛑 Update 🔞	Help				
System Options GSM Communications <mark>-Users/Access control</mark> Inputs/Burglar Alarm Zones	Remote Control Use			Guest mode	on USER 9	Γ	Auto Call Answering	2 s
Outputs (PGM)		2					Temporary access [Date/Time window
- Automation/Sensors	iButton Code	RFID Keycard	Keyb Code	OUT	ARM/DISARM	En	Start Date	Expiration Date
Event Summary	O000000000000000000000000000000000000	000000000000000000000000000000000000000	1234	OUT1	>	Γ	2021-05-09 🚞 23:59	2021-05-09 🛗 23:59
Events Log	00000000000	000000000000000000000000000000000000000		NONE		Γ	2021-05-09 🚞 23:59	2021-05-09 🛗 23:59
RT Testing&Monitoring Firmware	000000000000000000000000000000000000000	000000000		NONE			2021-05-09 🛗 23:59	2021-05-09 🛗 23:59

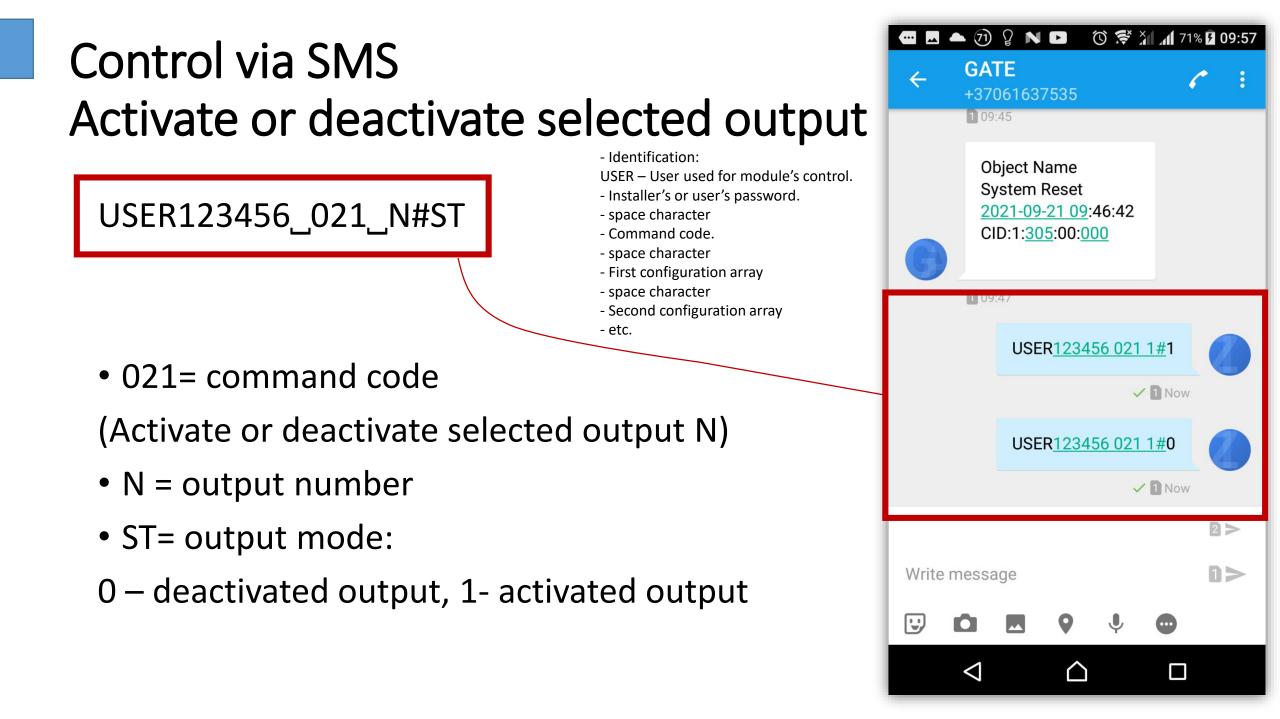



- Go to https://old.topkodas.lt
- Install and open


Please <u>contact us</u> for wholesale or d conditions.

Android and iPh


Android or iPhone phone app can be modules. App can be downloaded he

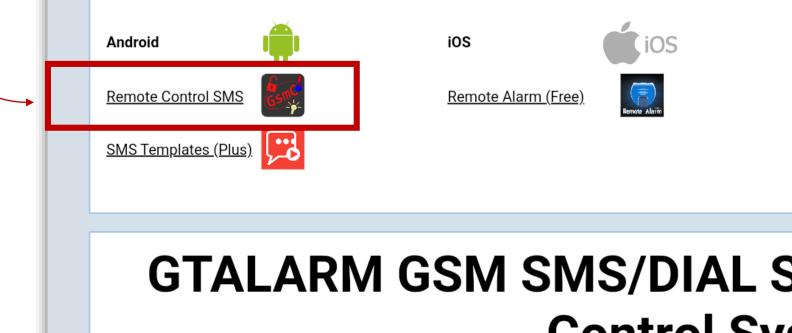


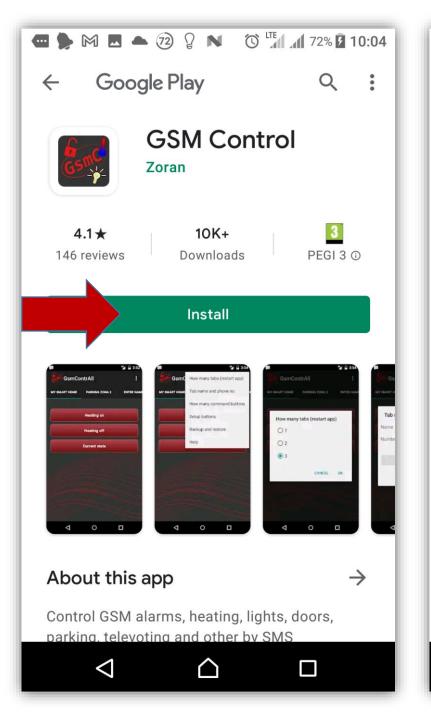

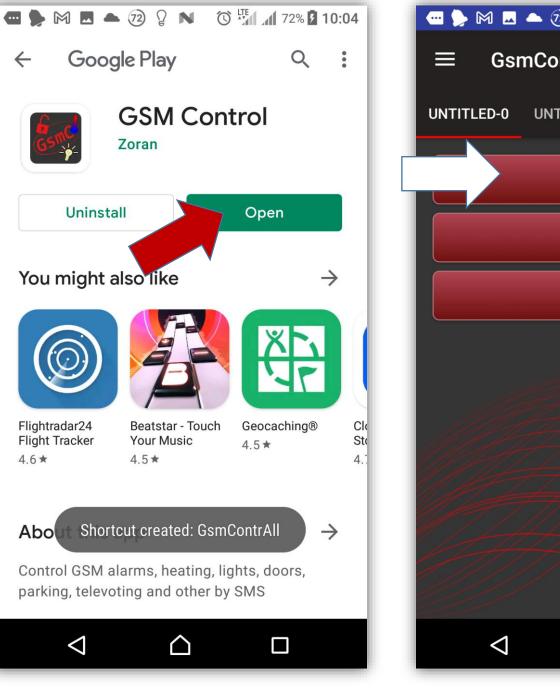




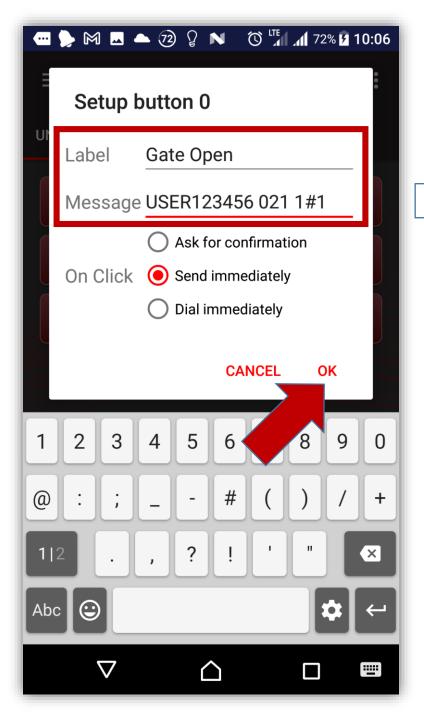

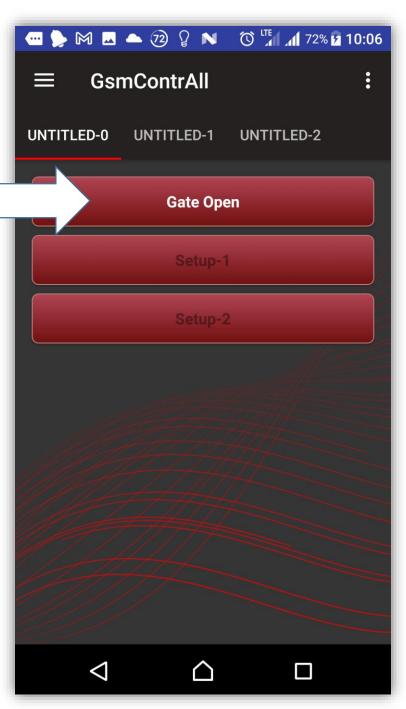

	L 🛆 72 P		72% 🗗 10:09
≡ G:	smContrAl		0 0 0
u Tab	0 name an	d phone n	0.
Name	Gate Ope	en	
Numb	er +370616		
	COI	NTACTS	
		CANCEL	ок
1	2 авс	3 DEF	-
4 _{GHI}	5 JKL	6 мло	•
7 pqrs	8 TUV	9 wxyz	×
* # (0 +		Done
∇		<u>`</u>	

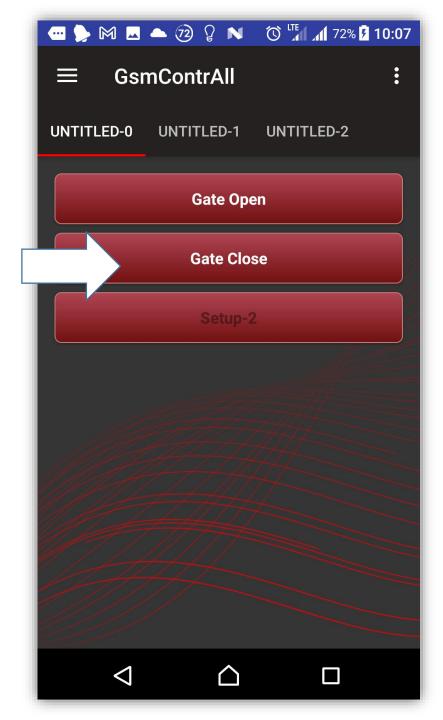

•••) M		▲ 72) <u></u>	N		. 11 72	2% 🦻 1	0:07				
	Setup button 1												
U	Label Gate Close												
	Message USER123456 021 1#0												
	 Ask for confirmation On Click Send immediately Dial immediately 												
					CA	NCEL	C	ЭK					
1	2	3	4	5	6		8	9	0				
@	:	;	_	-	#	()	/	+				
1 :	2	•	,	?	!	1	"		\mathbf{X}				
Abc								•	↔				
		∇		Ĺ	2								

More information:

- Website: https://www.topkodas.lt/downloads/
- Email: info@topkodas.lt